




**S7280**

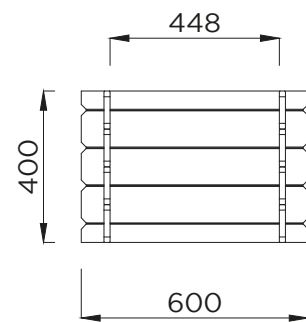


**vyvýšený záhon LANITPLAST POTTING10**

návod na montáž / összeszerelési útmutató / instrukcje montażu

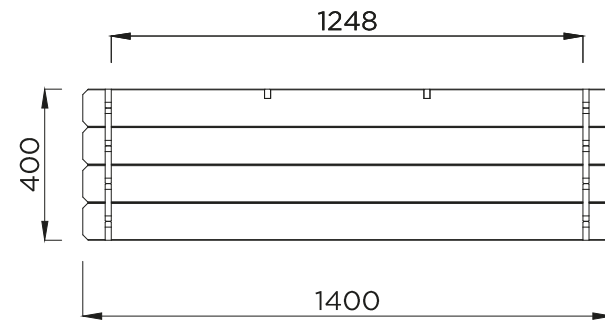

16 mm



196 L



**Obsah dodávky / obsah dodávky / A szállítás köre / Zakres dostawy**

**S7280**

Ref.

Index

#

# nok




A

S7280-A

0600

4




B

S7280-B

1400

6




C

S7280-C

0600

6




D

S7280-D

1400


2

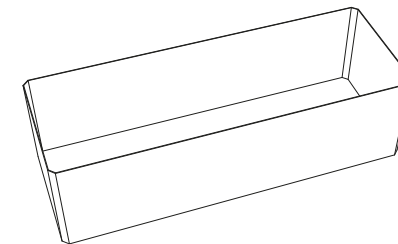

E

S7280-E

1



F

S7280-F

0480


2

# S7280




A = 4  
B = 6  
C = 6  
D = 2

1

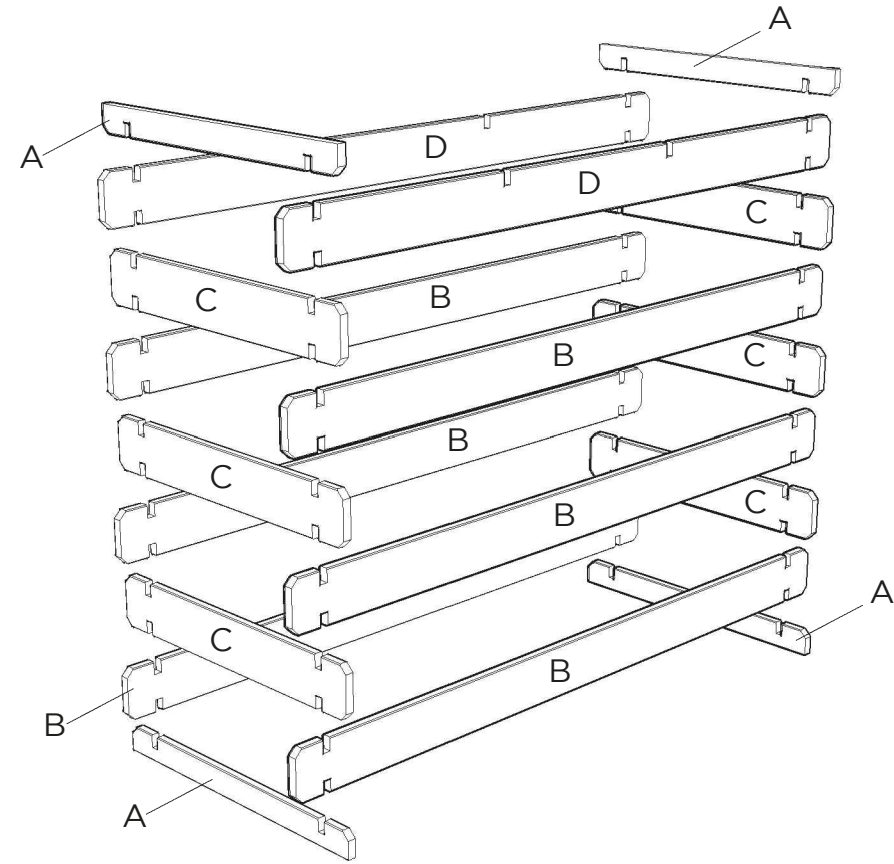

E = 1


2

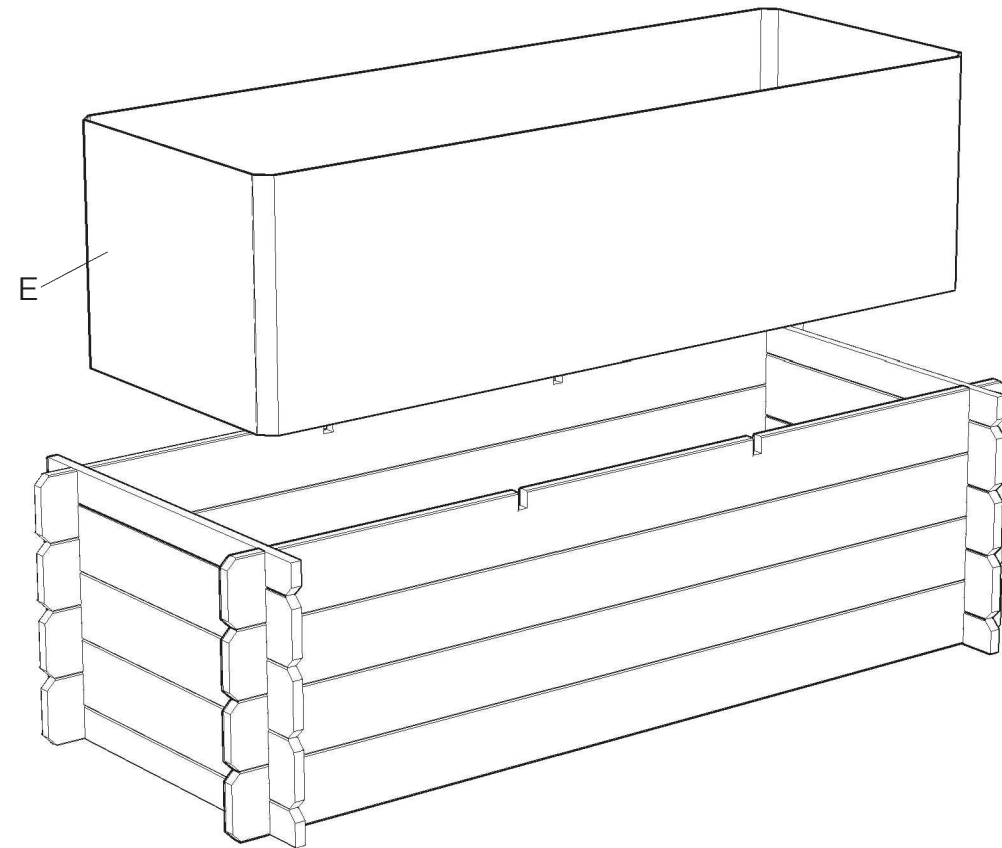

# S7280

F = 2

3

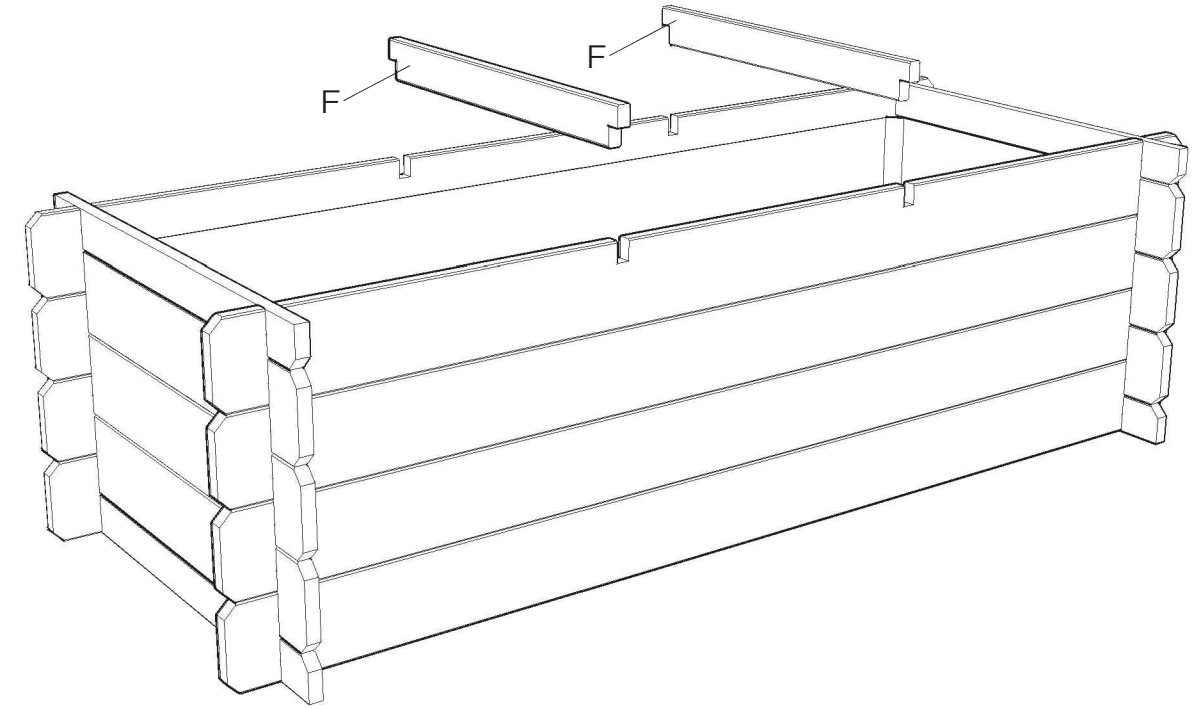

4

